

## 4100ES Service Parts List

<b>Fuses</b>	
<b>Replacement Service Part</b>	<b>Description</b>
208-002	1 Amp 120 Volt, Legacy Monitor Card
208-004	5 Amp, Legacy Power Supply F1 and F2
208-050	15 Amp, 4100ES Battery Harness
208-023	2 Amp, Legacy Signal Card and Power Supply
208-048	2 Amp, MAPNET II Devices
208-053	15 Amp, Legacy 10 Amp Relay Card, Enhanced (110 Ah) Battery Charger, and AC
208-094	20 Amp, Legacy Battery Fuse
208121	8 Amp, Legacy Expansion (50 Ah) Battery Charger
208-132	3 Amp, Legacy CPU Motherboard,
208-134	0.4 Amp, Legacy Internal Serial Communication Bus
208-136	5 Amp, Legacy Expansion Power Supply (w/leads [UL])
208-140	5 Amp 220 Volt, Legacy 8 pt Relay Card
208-142	12 Amp, Legacy Power Supply (8 Amp) for 100 Watt Amplifier
208-154	20 Amp, Legacy 110 Ah Charger Cabinet
208-156	30 Amp, Legacy 733-621 Battery Harness
<b>208-163</b>	<b>3 Amp 250 Volt Fast .177 X .57</b>
208-185	5 Amp 125VAC, Fast Acting GLS, 4100ES 8Pt/3 Amp Relay Card
208-186	3 Amp, 4100ES 4Pt/2 Amp Relay Card
208-189	2.5 Amp 250 Volt, Fast .177 X .57"
208-190	2.5 Amp, Subminiature Fuse
<b>* Discontinued Replacement Service Part.</b>	